
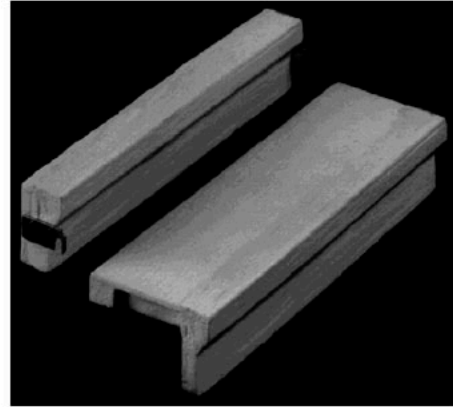


STEPTREAD Starter Step Details Page 1

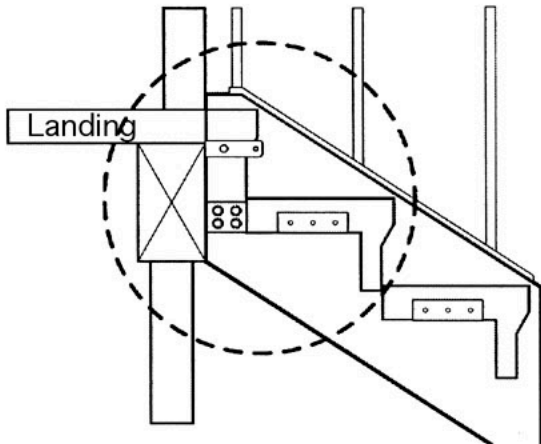

Above is a Closed-Riser STEPTREAD. Above it is starter step which transitions to the landing with easily adjustable height.

Bracket "A" is side mounted to the stringers, similar to example lower left. See details next page.

Bracket "B" is back mounted to the carriage beam. In either case, you need to set the carriage beam far enough back to allow the 3" thick riser.

Illustration of Bolt-on-to-Wood Landing Framing

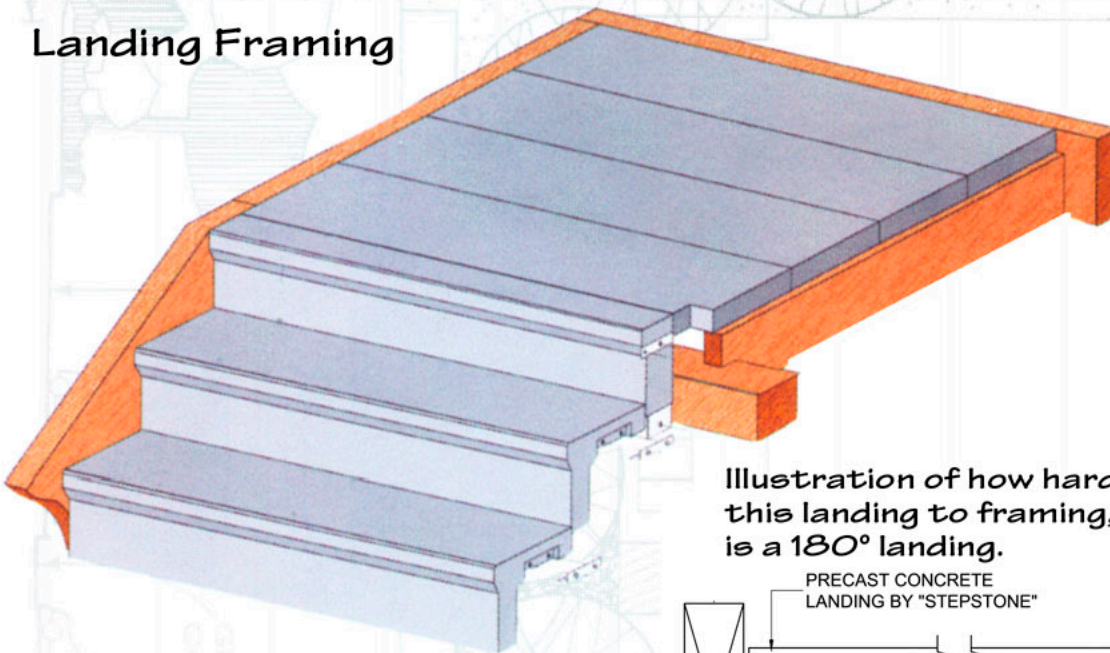


Illustration of how hardware attaches this landing to framing, assuming it is a 180° landing.

